HBE 300

The HBE 300 is able to control both CAN-compatible warning systems as well as analogue supplements. A special version of the HBE 300 was developed for use in amber light scenarios.



Homologation: (Germany and international)	
EMC in accordance with ECE-R10:	€1)10R-05 6932

PRODUCT FEATURES:

- CANopen Standard 447
- 8 fast access buttons
- 4 menu buttons
- Buttons with location and activation lighting
- Integrated microphone for public address
- High-contrast wide angle lens
- Easy to operate thanks to large buttons
- Convenient menu navigation with self-explanatory icons
- Analogue outputs for additional functions
- Can be used in any vehicle (even without a 447 gateway)
- Various models available
- Optimal for controlling DBW 4000 and DBW 5000



Examples:

Functions of	Functions of the fast access button (HBE300 GE1)		
AMBER	Switches on the main beacons and, if necessary, front flasher and 3 beacons together. Night dimming is activated during operation by pressing and holding the button (> 3 sec.).		
FRONT	Activates/deactivates the front flasher when the main beacons are activated. (locks with the main beacons).		
	Activates/deactivates the built-in front-facing working lights. A condition (approval signal) might be required or configurable.		
Pil	Activates/deactivates the built-in rear-facing working lights. A condition (approval signal) might be required or configurable.		
DISPLAY	Activates/deactivates the backlighting of the message in the lightbar. A quiet tone sequence cycle is triggered by pressing and holding the button if the main beacons are activated and the ignition is switched on (Kl.15).		
RWS	Activates/deactivates the rear warning system. A condition (approval signal) might be required or configurable.		
€D	Activates/deactivates the built-in left-facing working lights. A condition (approval signal) might be required or configurable.		
₫€	Activates/deactivates the built-in right-facing working lights. A condition (approval signal) might be required or configurable.		



Functions of the fast access buttons (HBE300)	
<	Navigate upwards through menu items and functions.
	Navigate downwards through menu items and functions.
ОК	Select and choose menu items/functions.
IJ	Return to the previous menu item level. By holding and pressing this button, you also switch off all active functions.

